

## Adaptador Macho JIC a Macho NPT



Macho JIC a Macho NPT				
Nombre	Conexión macho A	Conexión macho B	Presión máxima de trabajo	
			psi	bar
HMJ4-NM4	1/4" JIC	1/4" NPT	10.000	690
HMJ4-NM6	1/4" JIC	3/8" NPT	10.000	690
HMJ4-NM8	1/4" JIC	1/2" NPT	10.000	690
HMJ6-NM4	3/8" JIC	1/4" NPT	10.000	690
HMJ6-NM6	3/8" JIC	3/8" NPT	10.000	690
HMJ6-NM8	3/8" JIC	1/2" NPT	10.000	690
HMJ8-NM4	1/2" JIC	1/4" NPT	10.000	690
HMJ8-NM6	1/2" JIC	3/8" NPT	10.000	690
HMJ8-NM8	1/2" JIC	1/2" NPT	10.000	690
HMJ8-NM12	1/2" JIC	3/4" NPT	10.000	690
HMJ8-NM16	1/2" JIC	1" NPT	10.000	690
HMJ16-NM16	1" JIC	1" NPT	10.000	690